## REUSABLE SILICONE BAG






## **Reuse & Reduce Collection**

Reusable and useful products to reduce single-use plastic waste. A smart and reusable alternative to disposable plastic bags and single-use plastic containers and lids. Discover this long-lasting and environmentally safe products for your daily kitchen routine.

The best alternative to single-use plastic food containers. Specially designed for hermetic storage. Reusable platinum silicone bags in 3 different sizes: store and keep food fresh without using single-use containers and plastics. An airtight storage solution that can be used in fridges and freezers, or on shelves. Perfect for bulk buying!

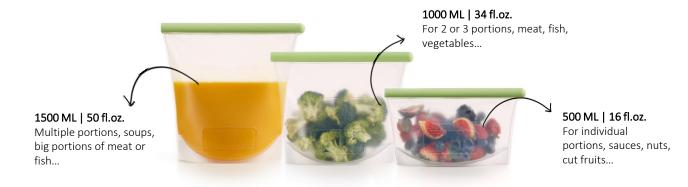

- 1. An alternative to single-use plastics for storage and preserve food. Try not to use single use plastic wrappings or food trays / containers.
- They are 100% airtight. It ecologically replaces the traditional plastic wrappers, since once opened, lose their tightness.
- These bags can be stored in two positions: in vertical or horizontal position. Order and hygiene in your refrigerator. Save space too.
- 4. Indication of the maximum amount to fill and preservation time control as they have a special area to write with a pen.
- 5. Suitable for defrosting food in the microwave. Use without the clamp.
- 100% Platinum Silicone. High quality material, hygienic, light, unbreakable. The thickness of the silicone protects the food from frost. Clamp made in ABS. BPA Free.









Reusable Silicone Bag 0,5L REF. 3400805B04U004 EAN. 8420460014461 NISBETS CODE FS287



**Reusable Silicone Bag 1L REF.** 3400810B04U004 **EAN.** 8420460014454

NISBETS CODE FS289



**Reusable Silicone Bag 1,5L REF.** 3400815804U004 **EAN.** 8420460014447
NISBETS CODE FS290



Kit Reusable Silicone Bag REF. 3400800SURU004 EAN. 8420460014553 NISBETS CODE FS288

Dimensions: 1,5L (196mm x 210mmx 66mm) / 1L (196mm x 170mm x 66mm) / 0,5L (196mm x120mmx 66mm) | Temperature: 220°C - 60°C | 428°F - 76°F | Materials: ABS | 100% Platinum Silicone | Suitable for: freezer, fridge, dishwasher. Only suitable to defreeze food at microwave without the tweezer. To warm on Microwave take off the tweezer.